


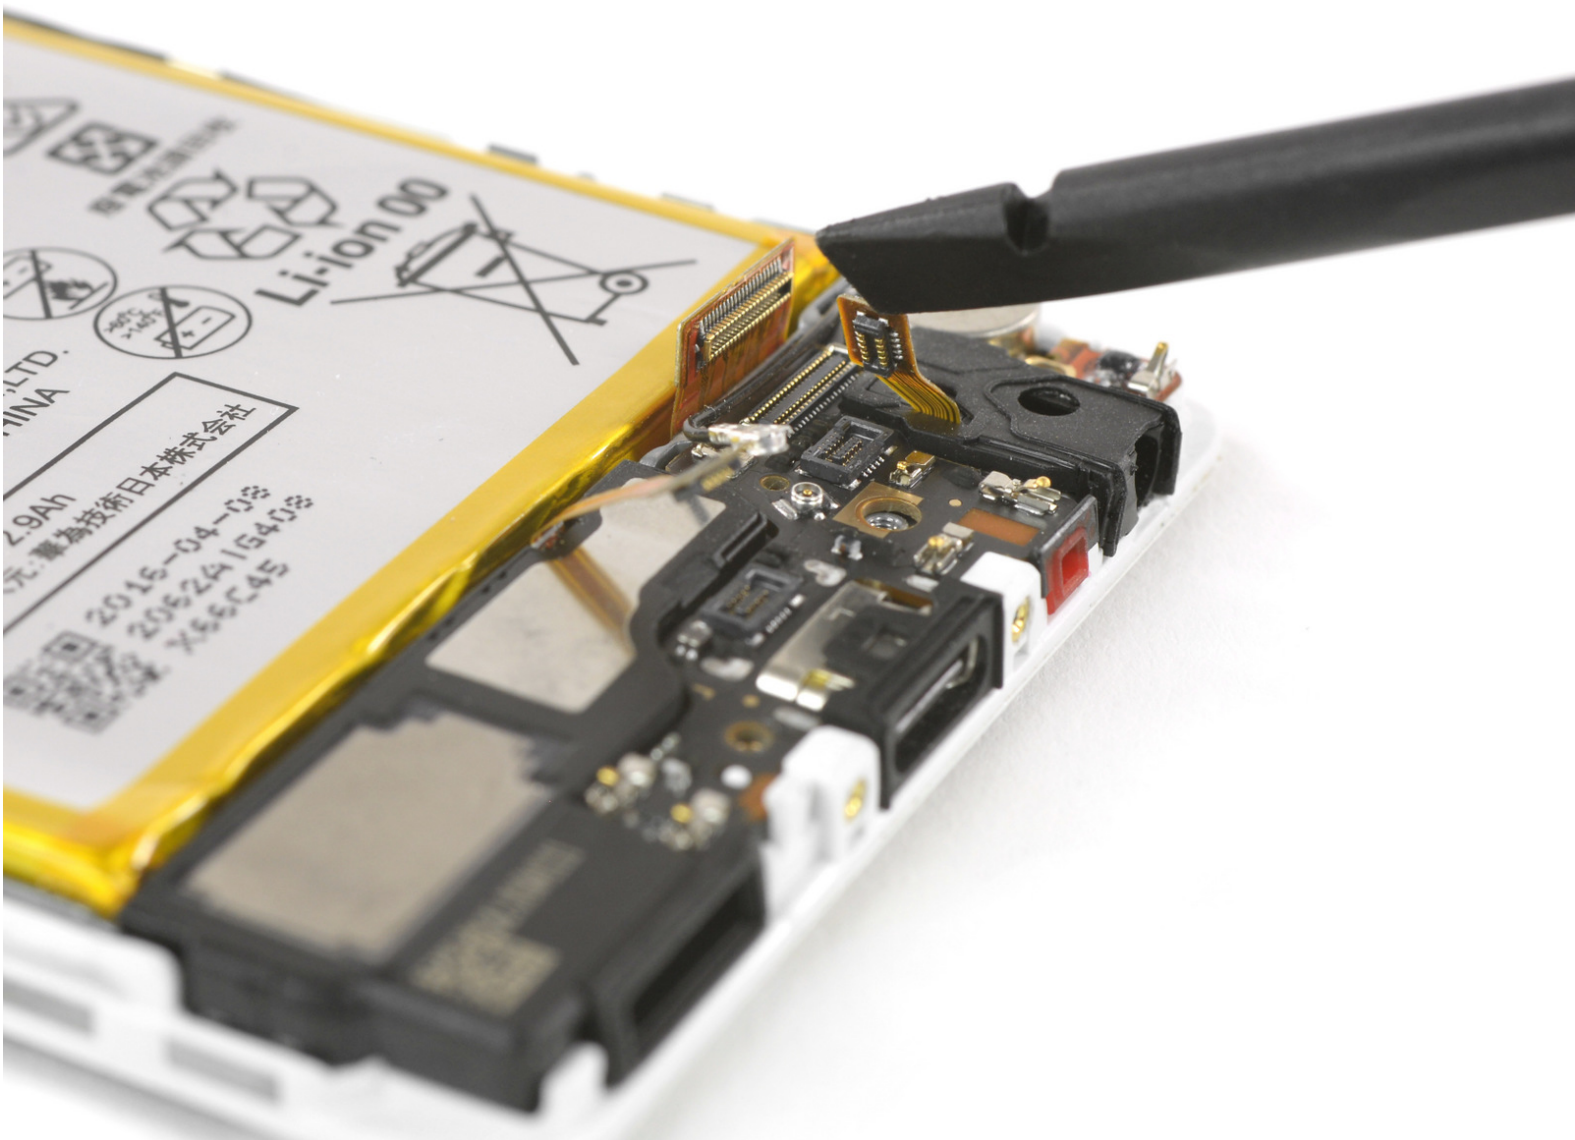

Huawei P9 lower section

pre-req for lower section (charging board, loudspeaker)

Written By: Dominik Schnabelrauch



INTRODUCTION


pre-req for lower section (charging board, loudspeaker)



TOOLS:


- [SIM Card Eject Tool](#) (1)
 - [Spudger](#) (1)
 - [Tweezers - Pro/ESD/Angled](#) (1)
 - [Phillips #000 Screwdriver](#) (1)
 - [iSclack](#) (1)
 - [P2 Pentalobe Screwdriver iPhone](#) (1)
-

Step 1 — lower section

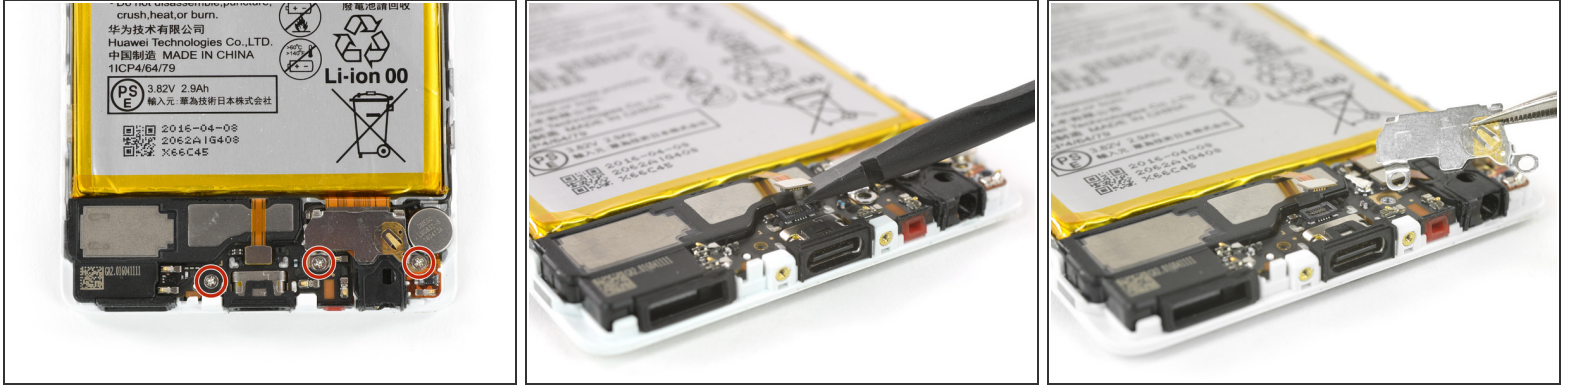

- Undo the three Phillips #000 screws.
- Disconnect the loudspeaker flex connector.
- Remove the metal bracket (mind the adhesive underneath).

Step 2

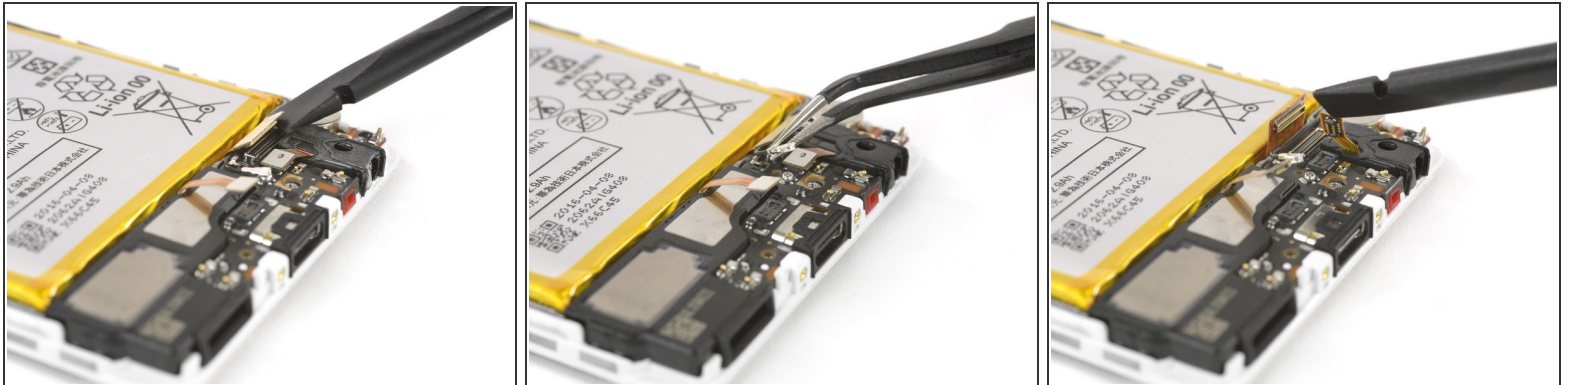

- Disconnect the motherboard flex cable and the antenna cable.
- Unplug the headphone jack connector.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-08-08 03:47:49 AM.